

MANUAL JJ-JS-084

Working voltage: 12-24V

Frequency: 433.92MHZ

Programming:

Press the P1:

- 1 time to program CH1 in monostable mode
- 2 times to program CH2 in monostable mode
- 3 times to program CH1 in bistable mode
- 4 times to program CH2 in bistable mode

Hold down the key of the radio remote control that you would like to acquire until the led blinks.

Erasing:

There are two ways of erasing

1. Erasing a single code

Press P2 for about three seconds (release the key); the LED will light up, press the key on the radio remote control that you want to delete.

2. Erasing all codes acquired:

Press P2 until the LED turns on (about 8 seconds).

NOTICE:

- since the data of rolling code is relatively bigger, it'll take you a little more time to operate remote with rolling code than that with fixed code.
- If you learning same code for more than one time, only the last code is memorized.

