

## Idol Instructions for Re-generation.

### Re-generate function for brands listed below:

If customers buy an Idol remote and don't have the original remote, they can re-generate an original remote.

**Step1:** Press together button 1 and button 4 for 3 seconds, the LED will go on then go off (1 second) till LED goes solid, release the buttons. Which means it's entering into Re-generate mode. **Please see fig1**

**Step2:** Press buttons to choose the brands as per table 2.0. For example, if you choose BFT MITTO brand, press 1<sup>st</sup> button once, then LED flashes once.

**Step3:** Confirm the brand. Press 3<sup>rd</sup> and 4<sup>th</sup> button at the same time. When the LED blinks fast, release the buttons. Now the Idol remote is functioning as a new BFT MITTO remote. **Please see fig3.**

## NOW CODE THE REMOTE TO THE RECEIVER.

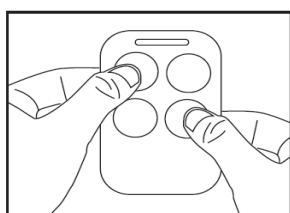 


fig1

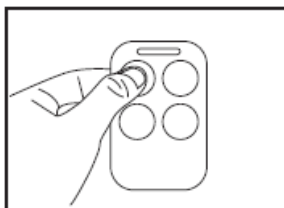 


fig2

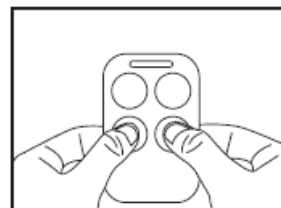 


fig3

**Table 2.0**

Remote	Press 1 time	Press 2 times	Press 3 times	Press 4 times	Press 5 times
1 <sup>st</sup> button	BFT MITTO	BENINCA cupido	NICE SMILO	NICEFLOR-S	Motorline
2 <sup>nd</sup> button	FAAC XT4 433 SLH	CAME TOP-432NA	DITEC DOL4C	GLIDEROL 315	SLAVE
3 <sup>rd</sup> button	SUPERLIFT	NOVA	V2 PHOENIX2	DOORHAN TRANSMITTER 4	KINGGATES
4 <sup>th</sup> button	BOSS BHT4	ATA PTX4	SOMMER 4020 868MHZ	ROGER	

**If you have regenerated a BFT Mitto 2 button remote the code set buttons will be 1 and 2.  
If you have regenerated a 4 button FAAC the code set buttons will be 3 and 4.**