



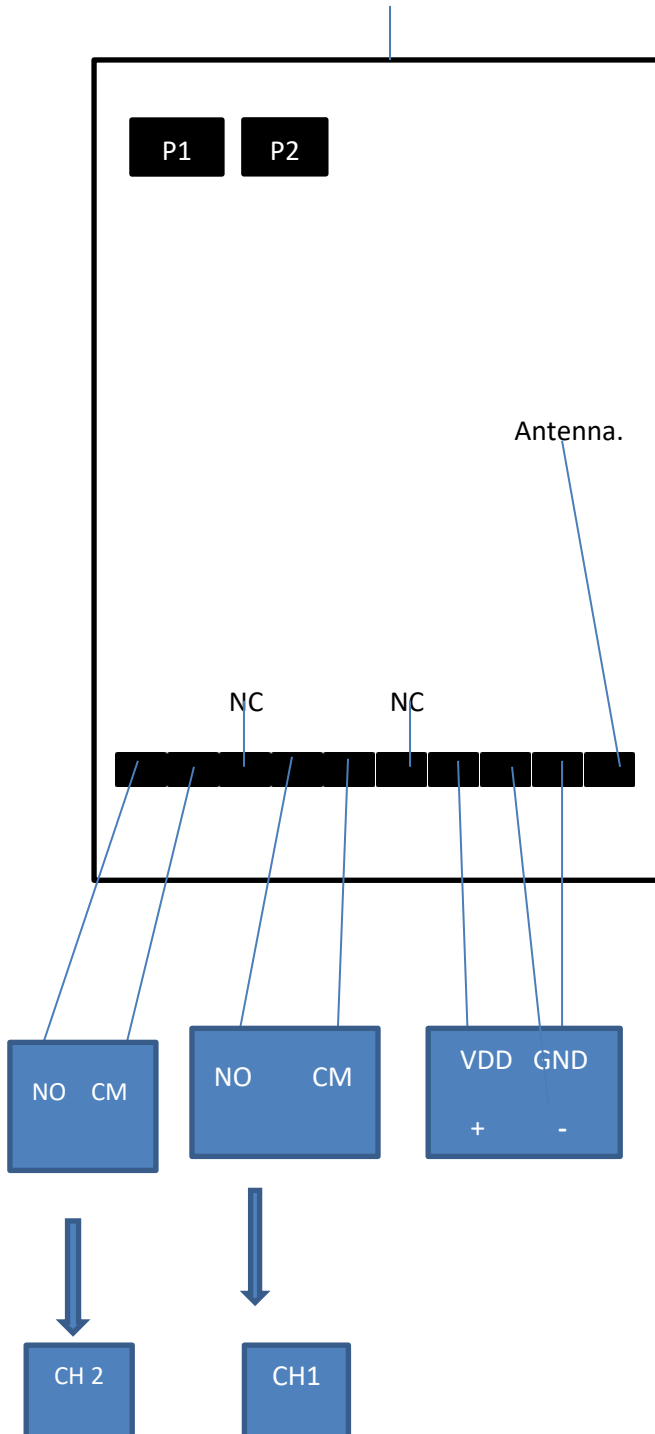

Codeezy Product Number 1036.  
Indoor Receiver Manual.

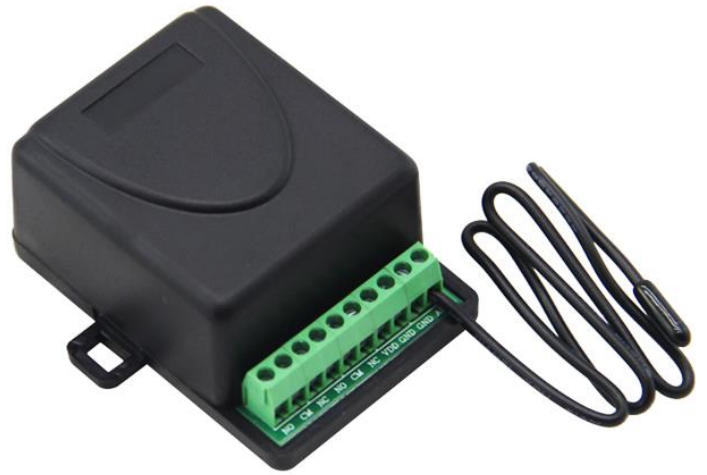

Working voltage: 12-24V  
Frequency: 433.92MHZ

## Programming:

Press the P1:

- 1 time to program CH1 in monostable mode
- 2 times to program CH2 in monostable mode
- 3 times to program CH1 in bistable mode
- 4 times to program CH2 in bistable mode

Hold down the key of the radio remote control that you would like to acquire until the led blinks.

Please note you cannot set CH1 and CH2 in bistable mode at the same time.

## Erasing:

There are two ways of erasing

### 1. Erasing a single code

Press P2 for about three seconds (release the key); the LED will light up, press the key on the radio remote control that you want to delete.

### 2. Erasing all codes acquired:

Press P2 until the LED turns on (about 8 seconds).

## NOTICE:

- A. Since the data of rolling code is relatively bigger, it will take you a little more time to operate remote with rolling code than that with fixed code.
- B. If you are learning same code for more than one time, only the last code is memorized.