

KEYPAD EASY INSTALL OPTION.

Factory set installer pin code is **0000***

ENTER NEW INSTALLERS CODE THAT IS UNIQUE TO YOU.

For this example, we are going to use **1111**

Installer needs to choose his own unique 4 numbers.

STEP 1 Enter **0000*** keypad will have one long beep to confirm.

STEP 2 Enter **69#**. Keypad will give one short beep to confirm.

STEP 3 Enter a new installer code **1111#** Keypad will give one long beep and one short beep. The new installer code has been programmed to the keypad.

PROGRAMMING THE CUSTOMERS ENTRY PIN NUMBER.

For this example, we will use **1919** installer needs to enter customers unique 4-digit pin number.

STEP 1 Enter new installer code **1111***

STEP 2 Key **01#** keypad will beep once

STEP 3 Enter new customers pin **1919#** one long beep and one short beep will confirm customers new pin.

CODING KEYPAD TO THE RECEIVER.

STEP 1 Enter installer code **1111*** keypad will have one long beep to confirm.

STEP 2 Press **55#** one short beep will confirm.

STEP 3 Press **01#**

STEP 4 Keypad will transmit for 10 seconds.

Press learn button on the receiver within this time.

Receiver will flash. Keypad is now programmed to the receiver

Keypad will turn off after 10 seconds

Programming is complete.

- *For further information please refer to the full set of instructions. *

